



Phone: 772 463-6522
Fax: 772 872-5114
3000 SE Waaler Street
Stuart, FL USA 34997
www.MinderResearch.com

Instructions for changing the battery in your TireMinder Dual 2 Tire Gauge

Luckily, replacing the LR44 batteries in your Dual 2 requires minimal disassembly.
(You do not need to ground yourself before taking your gauge apart)

Tools – 1 small Phillips head screwdriver

1. Remove the Dual Head
 - Grip dual head and shaft firmly
 - Rotate counter clockwise until loose
 - Remove shaft
2. Now you must remove the black display to gain access to the battery compartment
 - Remove the 2 small screws located on the back of the handle
 - Now pop the black display straight up
3. Remove the old LR44 Batteries (dispose of according to local rules)
 - Place the 3 batteries in the compartment with the plus + side toward the spring.
 - Put 2 in first then slide the 3rd battery in.
 - Place the gray sponge back on top of batteries
4. Reverse the process and put the gauge back together.

Tips and Tricks

- Keeps the blue wire on top of the gray sponge protecting the batteries
- Do not pinch the red and black wires when putting back together
- Make sure you place the 2 screws you removed from the back some place safe, like magic they disappear
- Use the right size Phillips screwdriver to avoid stripping the head
- Test the display screen button and flashlight button before putting the 2 screws back in.



Phone: 772 463-6522
Fax: 772 872-5114
3000 SE Waaler Street
Stuart, FL USA 34997
www.MinderResearch.com